


Basic Instructions

DVD-Video: Set the TV input (top right of remote control shown in picture) to HDMI2. Adjust volume with TV remote control. (Make sure "mute" button is not pressed)

Video Tape: Set the TV input (top right button) to AV1. Adjust volume with TV remote control.

Laptop: Set the TV input (top right button) to RGB-PC. Video and audio cable for connection to laptop are found in the cabinet to the left of the DVD player. The audio cable is needed only if you're playing audio from your laptop. Windows laptops connect directly to the cable provided. Mac laptops use the adaptor that came with your laptop.

Hi-Fi Audio (DVD only): Turn on Sony Receiver and make sure that the front panel displays "CD" in lights. (If not, press the input button on the front of the receiver marked "CD".) Press the mute button on the TV remote control and use the receiver's volume control to adjust the sound level on the external Bose speakers.

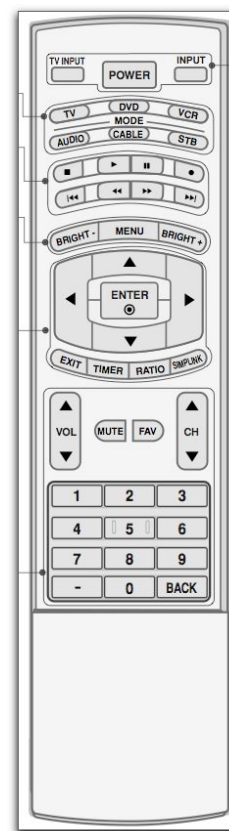

Feel free to contact Lavon Page (460-6103) if you run into any problems or have suggestions.